



- (A) Numeric keypad 0~9:
Act as message code, volume adjustment (7 and 9) and next message (0).
- (B) LED indicator:
Green LED – power on; Amber LED – low battery;
Red LED flashing – running out of power.
- (C) Play / Pause:
Play or pause a selected message.
- (D) Power ON/OFF; Stop button:
Press to power on; press and hold 2 seconds to power off.
Press to stop playing a soundtrack while it is played.
- (E) Headphone jack:
2 headphone jacks (stereo) available.
- (F) Hole for battery case removal:
Insert a pin in this hole to unlock battery case,
and then slide it to remove.
- (G) Battery case:
Open battery case with a pin (φ 1.0mm) and allocate batteries.
- (H) IEEE 1394 port:
Act as a port for connection with audio guide data updater.
- (I) Lanyard tie-up:
To be used with lanyard as a hand-free solution.
- (J) Loudspeaker:
Direct sound output when proceeds it with private listening.
It will not work when headphone is in use.