



(a) Front view

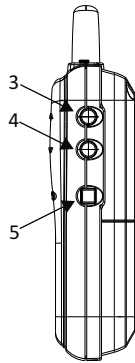


(b) Side view

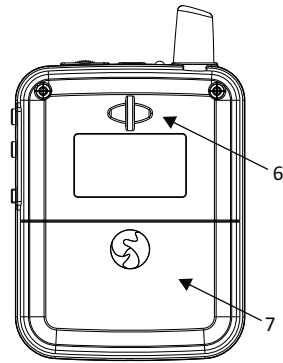


(c) Rear view

## Illustration:

1. Antenna
2. LCD window
3. UP button
4. DOWN button
5. Power On/Off button
6. Lanyard tie-up
7. Battery room
8. Power/TX LED indicator; Power/RX LED indicator
9. Microphone input jack (TX); Earphone input jack (RX)
10. Volume adjustment wheel
11. Charging contacts

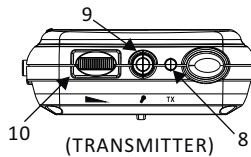


(TRANSMITTER)

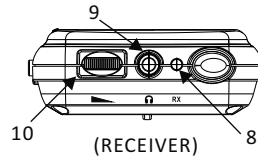

(RECEIVER)

 

(d) Top view






(e) Bottom view

## Operation and Instructions:



### Power On and Power Off:

- Press and hold power button (⏻) up to 2 seconds. The LCD window will display  at a short time and retrieve the channel number used last time. Power on successfully.
- Press and hold power button (⏻) up to 2 seconds. The LCD window will display  then power off completely.

### Automatic Keylock and Unlock:

- Channel number will be locked automatically when no change made to UP and DOWN button in 5 seconds. Lock icon () will be displayed in LCD window. In Lock mode, the channel number can't be changed.
- Press UP () and DOWN () buttons up to 1 second to escape from lock mode. Lock icon will be removed from LCD window.

### Battery Autonomy:

- When battery icon is displayed as full autonomy  (4-level), the battery contains sufficient energy.
- When battery icon is displayed as low battery , which indicates only 10% battery energy life. Please change with new battery or give a charge.

### Volume Adjustment:

Adjust volume to a required level with the volume wheel.

### Unit in Charging:

When this unit (transmitter or receiver) is employed by a charger, it will be shut off automatically, no matter it is On or Off before putting onto the charger.